

Instruction and Parts Sheet

CY Series Hollow Cylinders

L1672

Rev. A

02/98

IMPORTANT RECEIVING INSTRUCTIONS: Visually inspect all components for shipping damage. If any shipping damage is found, notify carrier at once. Shipping damage is NOT covered by warranty. The carrier is responsible for all repair or replacement cost resulting from damage in shipment.

SAFETY FIRST


Carefully plan your system by selecting components designed to perform the intended operation and which will adequately perform with existing equipment. Always check the product limitations regarding pressure ranges, load capacities and set-up requirements. The system operating pressure must not exceed the pressure rating of the lowest rated component in the system. Read all CAUTIONS, WARNINGS, and INSTRUCTIONS included with, or attached to, each product. Follow all safety precautions to avoid personal injury or property damage during the system operation. ENERPAC CANNOT BE RESPONSIBLE FOR DAMAGE OR INJURY RESULTING FROM UNSAFE USE OF PRODUCT, LACK OF MAINTENANCE OR INCORRECT PRODUCT AND SYSTEM APPLICATION.

Contact ENERPAC when in doubt as to safety precautions, or applications.

Installation

These units can be mounted in any direction. All models except CY1254-25 can be mounted on a manifold (as shown at right). When manifold mounting, be sure fixture can withstand 3,000 psi working pressure. There are two tapped holes in the cylinder for mounting purposes. Use -20 socket head cap screws for CY1254-25; -16 socket head cap screws for CY2129-5, CY2129-25, and CY2754-5; and -14 socket head cap screws for CY3500-19. Use -27 NPTF male connector to connect hydraulic pressure line to the unit, or mount on a manifold. Tighten pressure line at the valve, but loosely thread onto cylinder fitting. Reduce hydraulic pressure to lowest possible setting, and activate valve to send fluid to the cylinder. When hydraulic fluid begins to leak from the cylinder connection, completely tighten pressure line. To further bleed the system, cycle cylinder several times with cylinder hydraulic connection facing up and with the cylinder lower than the pump. This will allow any trapped air to return to the pump reservoir.


All CY series hollow cylinders have a maximum operating pressure of 3000 psi.

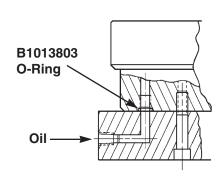

Typical Manifold Mounting



These cylinders are assembled under slight spring pressure. Use care when disassembling cylinder head cap (item 1) from cylinder body (item 6).

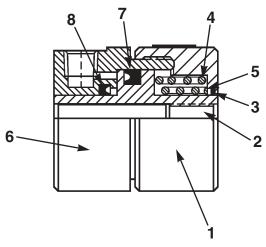

Parts List						
Part Number CY1254-25	Part Number CY2129-5	Part Number CY2129-25	Part Number CY2754-5	Part Number CY3500-19	Qty.	Description
406076	406072	406072	406074	406039	1	Cylinder Head Cap
406075	4060712	4060711	406073	406038	1	Piston
★ B1221503	★ B1230503	★ B1230503	★ B1232503	★ B1265503	1	O-Ring
401739	401887	401887	401888	406053	1	Spring
401899	401835	401835	401889	-	1	Spring
406068	406070	406069	406067	406037	1	Cylinder Body
★ 403034	★ 403033	★ 403033	★ 403031	★ B1338513	1	Seal
★ 403035	★ 403032	★ 403032	★ CS370041	★ 402021	1	Seal
-	A1007245	A1007245	A1007245	A1007245	1	Flush Plug
CY125425K	CY2129K	CY2129K	CY27545K	CY350019K		Repair Kit
	CY1254-25 406076 406075 ★ B1221503 401739 401899 406068 ★ 403034 ★ 403035 - CY125425K	CY1254-25 CY2129-5 406076 406072 406075 4060712 ★ B1221503 ★ B1230503 401739 401887 401899 401835 406068 406070 ★ 403034 ★ 403032 - A1007245 CY125425K CY2129K	CY1254-25 CY2129-5 CY2129-25 406076 406072 406072 406075 4060712 4060711 ★ B1221503 ★ B1230503 ★ B1230503 401739 401887 401887 401899 401835 401835 406068 406070 406069 ★ 403034 ★ 403032 ★ 403032 - A1007245 A1007245 CY125425K CY2129K CY2129K	CY1254-25 CY2129-5 CY2129-25 CY2754-5 406076 406072 406072 406074 406075 4060712 4060711 406073 ★ B1221503 ★ B1230503 ★ B1232503 401739 401887 401887 401888 401899 401835 401835 401889 406068 406070 406069 406067 ★ 403034 ★ 403032 ★ 403032 ★ CS370041 - A1007245 A1007245 A1007245	CY1254-25 CY2129-5 CY2129-25 CY2754-5 CY3500-19 406076 406072 406072 406074 406039 406075 4060712 4060711 406073 406038 ★ B1221503 ★ B1230503 ★ B1232503 ★ B1265503 401739 401887 401887 401888 406053 401899 401835 401835 401889 - 406068 406070 406069 406067 406037 ★ 403034 ★ 403033 ★ 403033 ★ 403031 ★ B1338513 ★ 403035 ★ 403032 ★ CS370041 ★ 402021 - A1007245 A1007245 A1007245 A1007245 CY125425K CY2129K CY2129K CY27545K CY350019K	CY1254-25 CY2129-5 CY2129-25 CY2754-5 CY3500-19 Qty. 406076 406072 406072 406074 406039 1 406075 4060712 4060711 406073 406038 1 * B1221503 * B1230503 * B1232503 * B1265503 1 401739 401887 401887 401888 406053 1 401899 401835 401835 401889 - 1 406068 406070 406069 406067 406037 1 * 403034 * 403033 * 403033 * CS370041 * 402021 1 - A1007245 A1007245 A1007245 A1007245 A1007245 CY27545K CY350019K

★ Indicates items included in the above mentioned Repair Kits.

Australia **ENERPAC**

Applied Power Australia, Ltd. Switzerland P.O. Box 261 Regents Park Sydney, N.S.W. 2143 Tel: (61) (2) 9743 8988 Fax: (61) (2) 9743 8648

Applied Power Moscow Leninsky Prospekt 95A 117313 Moscow, Russia Tel: (7)(95) 956 5090 Fax: (7)(95) 936 2006

France, Switzerland, Turkey, Greece, Africa, Middle East

ENERPAC S.A. B.P.200, Parc d'Activitiés du Moulin de Massy 1 rue du Saule Trapu, F-91882 Massy CEDEX (Paris) France Tel: (33) 1 60 13 68 68 Fax: (33) 1 69 20 37 50

Germany, Scandinavia, Eastern Europe, Austria,

ENERPAC Applied Power GmbH P.O. Box 30 01 13 Mündelheimer Weg 51 40472 Düsseldorf 30 Germany Tel: (49) (211) 47 14 90 Fax: (49) (211) 4714 940

Holland, Belgium, and Luxemburg

ENERPAC B.V. P.O. Box 269, Storkstraat 25 3900AG Veenendaal Holland Tel: (31) (318) 535911

Fax: (31) (318) 525613

Hong Kong

ENERPAC Applied Power Asia PTE LTD.10-17 Sasame Kita-cho Room No. 907, Workingberg Toda-City Commercial Building 41-47 Marble Road. North Point Tel: (852) 2561-6285 Fax: (852) 2561-6772

India **ENERPAC**

Hydraulics (India) Pvt Ltd. 203 Vardhaman Chambers Plot #84, Sector 17 Maharashtra, India Tel: 91-22-7632061 Fax: 91-22-7670309

Italy

ENERPAC Via Canova, 4 20094 Corsico (Milano) Italy Tel: 39 2 45 82 741 Fax: 39 2 48 60 12 88

Japan

Applied Power Japan LTD Saitama 335, Japan Tel: 81 048 422 2251 Telex: J26275 Fax: 81 048 422 0596

Mexico

ENERPAC Applied Power Mexico Av. Principal La Paz #100 Fracc. Industrial La Paz Vashi, New Bombay 400 705 42092 Pachuca, Hidalgo, Mexico 28100 Acobendas (Madrid) Tel: (52) 771 33700 Fax: (52) 771 83800

Singapore

Applied Power Asia PTE LTD. 47 Jalan Pemimpin #01-02 & Applied Power Italiana S.p.A. #01-03 Sin Cheong Building Singapore 577200 Tel: (65) 258 1677 Fax: (65) 258 2847

South Korea

ENERPAC Applied Power Korea Ltd. 163-12, Dodang-Dong Wonmi-ku, Buchun-Shi, Kyunggi-Do Republic of Korea Tel: (82) (32) 675 0836 Fax: (82) (32) 675 3002

Spain, Portugal **ENERPAC**

Applied Power International, S.A. ENERPAC Calle de la Imprenta, 7 Polígono Industrial Spain Tel: (34) 1 661 11 25 Fax: (34) 1 661 47 89

United Kingdom, Ireland

ENERPAC Ltd. Unit 3 Colemeadow Road North Moons Moat Redditch, Worcester B98 9BP England Tel: 44 01527 598 900 Fax: 44 01527 585 500

United States, Canada, Latin America and Caribbean

13000 West Silver Spring Drive Butler, Wisconsin 53007, USA Tel: (414) 781-6600 1-800-433-2766 (End User) 1-800-558-0530 (Distributor)

Canada

Fax: (414) 781-1049

Tel: 1-800-426-4129 (End User) Tel: 1-800-426-2284 (Distributor)

Latin America and Caribbean Tel: (414) 781-6600 ext. 263 Fax: (414) 781-5561



All Enerpac products are guaranteed against defects in workmanship and materials for as long as you own them. Under this guarantee, free repair or replacement will be made to your satisfaction.

For prompt service, contact your Authorized Enerpac Service Center or call toll free:

In U.S.A. 1-800-558-0530 In Canada 1-800-426-2284