



Industrial PC

PPC-A53-070



PN: CS10600-IMX8MP-070P

Content can change at anytime, check [documentation website](http://www.chipsee.com) for latest information.
www.chipsee.com

Contents

1. PPC-A53-070	3
1.1. Product Overview	4
1.2. Ordering Options	5
1.2.1. Operating System	5
1.2.2. Optional Features	6
1.3. Hardware Features	6
1.4. Power Input	7
1.5. Touch Screen	9
1.6. Connectivity	9
1.6.1. RS232/RS485/CAN	10
1.6.2. GPIO Port	11
1.6.3. USB Connectors	13
1.6.4. LAN Connectors	15
1.6.5. WiFi & BT Module	15
1.6.6. 4G/LTE Module	16
1.7. TF Card Slot	17
1.8. Audio Connectors	17
1.9. HDMI Connector	19
1.10. PROG Button	19
1.11. Mounting Procedure	20
1.12. Mechanical Specifications	20
1.13. 3D Model	21
1.14. Disclaimer	22
1.15. Technical Support	22

PPC-A53-070



Front View



Rear View



Side View 1



Side View 2

Product Overview

The Cortex[®]-A53 series PPC-A53-070 (PN: CS10600-IMX8MP-070P) is a high-quality industrial panel PC. It features a 7" 5-point capacitive touch screen with a resolution of 1024 x 600 pixels and a brightness of 400 cd/m².

Key Applications

- Human Machine Interface HMI
- Mobile Applications
- Video Processing

- Machine Learning
- Video Gaming
- Process Control
- Process Monitoring
- ATM...

It is available both as an embedded solution and as a device housed in an aluminum casing with bezels, thus facilitating different installation options:

- Installation on an industrial cabinet
- Integration with the existing equipment

The PPC-A53-070 Industrial Panel PC is based around the powerful i.MX8MP System on Chip (SoC), powered by the NXP i.MX8MP low-power processor which integrates a quad-core Cortex®-A53 1.6GHz processor.

The i.MX8MP supports multi-format video decoders and has a high-performance LPDDR4 4GB RAM capable of sustaining demanding memory bandwidths. It also provides a complete set of peripheral interfaces.

Ordering Options

Chipsee products can be customized during the ordering process. The product will be shipped with the pre-installed factory defaults if no extra requirements are specified. The table in the [Hardware Features](#) section provides information about the default options bundled with the product.

Note

You can order the PPC-A53-070 from the official [Chipsee Store](#) or from your nearest distributor.

Operating System

This product comes with a pre-installed OS of your choice. Please see the list below for the supported OSes, which can also be obtained from the [Software Documentation](#) section, along with the detailed installation instructions.

- Android 12
- Yocto Linux Qt 6.3

Warning

The **Software Documentation** section provides a detailed instruction on how to install different OSes on your own. However, bear in mind that Chipsee can't take the responsibility of inadequate installation procedure. If you "brick" your device, please contact Chipsee Technical Support at support@chipsee.com for further assistance.

Optional Features

The PPC-A53-070 Industrial Panel PC does not include the 4G/LTE module by default. The module is optional and can be selected at the Chipsee store during the ordering process.

Warning

Installation, repair, and maintenance tasks should be performed by trained personnel only. Chipsee does not bear any responsibility for damage caused by inadequate handling of the product.

Hardware Features

The PPC-A53-070 Industrial Panel PC offers a broad range of performance and connectivity options for scalable integration, providing expandability according to future needs. Some of the key features are listed in the table below.

PPC-A53-070	
CPU	NXP i.MX8MP, Quad(4)-core Cortex-A53 (1.6GHz)
RAM	LPDDR4 4GB
eMMC	32GB
SSD	Not supported
Storage	TF Card, Supports up to 128GB SDHC
HDMI	1 x HDMI-D(Micro HDMI) OUT
Display	7" LCD, 1024 x 600, High Brightness: 400 cd/m ²
Touch	5-point capacitive touch screen
USB	1 x USB 2.0 HOST, 1 x USB 3.0 HOST, 1 x USB Type-C ¹
LAN	2 x RJ45, GbE, including 1 x optional Power over Ethernet (PoE) port
Audio	3.5mm Audio In/Out Connector, 2W Internal Speaker
Buzzer	Yes
RTC	High accuracy RTC with farad capacitor, can work 1 week after power off (default) . High accuracy RTC with lithium coin battery, can work 3 years after power off <i>(optional)</i> .
RS232	default 2 x RS232 (Optional 6 x RS232 at most, include 1 debug port) ²
RS485	default 3 x RS485 at most ²
CAN	default 2 x CAN (1 x CAN can be configured to RS232 optionally)


PPC-A53-070	
GPIO	8 Channels Isolated IO, 4 x Input and 4 x Output
WiFi/BT	Integrated WiFi/BT Module
4G/LTE	Supported, Optional
Power Input	From 6V to 36V
Current	600mA Max at 12V, 450mA Idle at 12V
Power Consumption	7.2W Max, 5.4W Idle (Maximum brightness)
Working Temperature	From 0°C to +60°C
OS	Android 12, Yocto Linux Qt 6.3
Dimensions	PPC-A53-070 (PN: CS10600-IMX8MP-070P): 188.05 x 123.11 x 33.20mm
Weight	PPC-A53-070 (PN: CS10600-IMX8MP-070P): 610g
Mounting	PPC-A53-070 (PN: CS10600-IMX8MP-070P): Panel, VESA

Table 80 Key Features

-
- 1** USB3.0 port and USB-C port share one node and cannot be used together. In Linux USB3.0 HOST is enabled by default; in Android USB-C OTG is enabled by default. You can change this config by software in the operating systems, e.g.: disable USB3.0 HOST then enable USB-C OTG in Linux, or vice versa in Android.
- 2(1,2)** This product has 3 x CPU UART, 2 x USB UART by default, 6 x UART channels at most. The default configuration is 2 x RS232 and 3 x RS485, including 1 RS232 debug port. There is 1 x CAN that can be configured to RS232 (USB UART). UART can be swapped between RS232 and RS485 modes easily, if you need a different RS232/RS485/CAN configuration, please get in touch with the Chipsee Technical Support at support@chipsee.com when placing an order.

Power Input

The PPC-A53-070 Industrial Panel PC can be powered by a wide range of input voltages: From 6V to 36V DC. The power input connector is a **3-pin, 3.81mm terminal**. The polarity and the pinout is shown in the figure below.

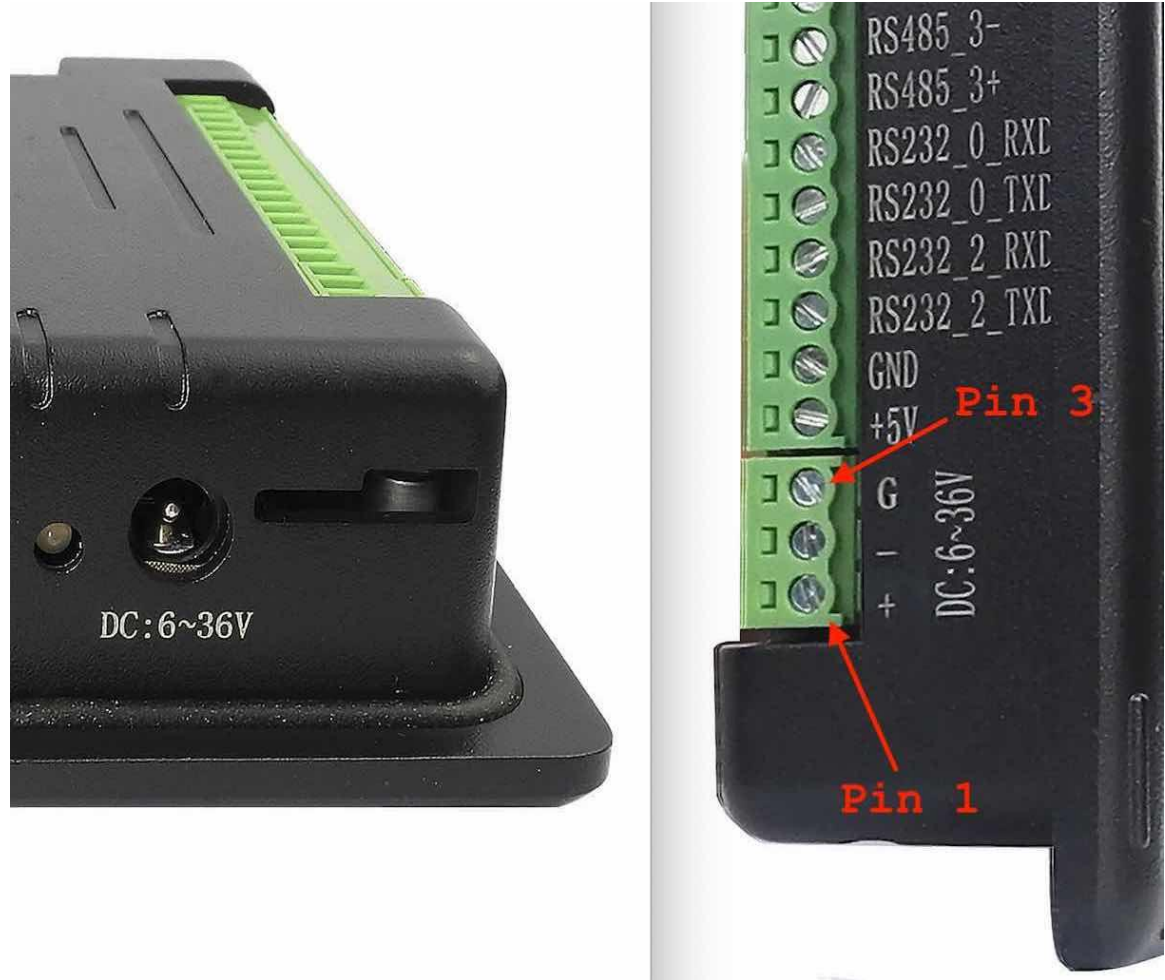


Power Input

Note that the “+” sign represents the positive power input, it is printed at the casing and as a silk-screen on a PCB of the embedded version. The “-” terminal is shorted to the ground.


Power Input Definition		
Pin Number	Definition	Description
Pin 1	Positive Input	DC Power Positive Terminal
Pin 2	Negative Input	DC Power Negative Terminal
Pin 3	Ground	Power System Ground

Table 81 Power Connector

 **Note**

The system ground “**G**” is connected to power negative “-” on board.

There is another power input port, it is a 2.1mm x 5.5mm x 9.5mm DC jack. For a proper DC power connector, refer to the figure below.

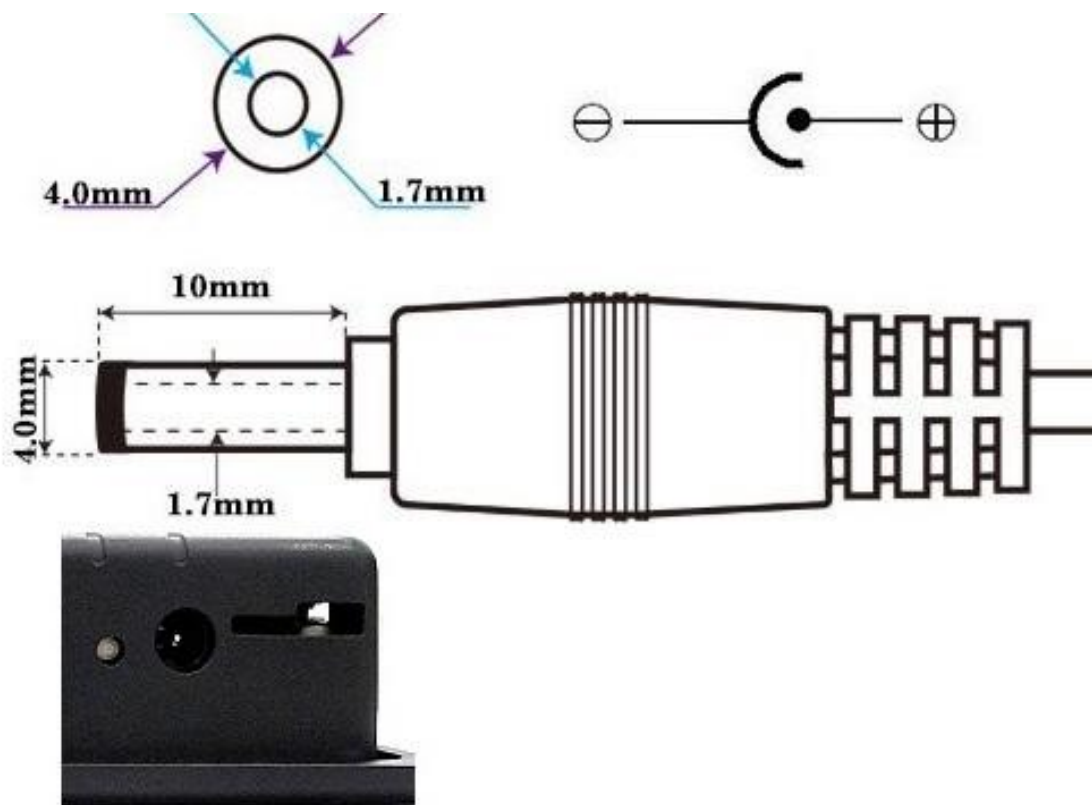

DC Jack

Touch Screen

The PPC-A53-070 Industrial Panel PC uses a 5-point capacitive touch screen.

Attention

A capacitive touch screen is susceptible to power noise and Electromagnetic Radiation (EMR). It may cause LCD ripples or even capacitive touch malfunction. If using a capacitive multi-touch test application, you might notice the touch points float erratically across the display. There are several solutions to this problem:


1. Use a high-quality Power Adapter Unit (PSU) with low EMR. You can also provide power from a battery.
2. Make sure that the PPC-A53-070 Power Input connector (pin 3) is properly connected to the Power System Ground to provide sufficient EMI shielding and eliminate the problem entirely.
3. Bad GND problems can also be confirmed by touching pin 3 of the Power Input connector with one hand while operating the capacitive touch screen with the other hand. In this case, the operator's body acts as the Power System Ground.

Connectivity

There are many connectivity options available on the PPC-A53-070 industrial PC. It has 1 x USB 2.0 HOST, 1 x USB 3.0 HOST, 1 x USB Type-C (USB3.0 and USB-C share one node); 2 x RJ45, GbE, including **1 x optional** Power over Ethernet (PoE) port; up to 6 x UART terminals (RS232/RS485), up to 2 x CAN.

RS232/RS485/CAN

The serial communication interfaces (RS485, RS232, and CAN) are routed to a **16-pin 3.81mm terminal**, as illustrated on the figure below.

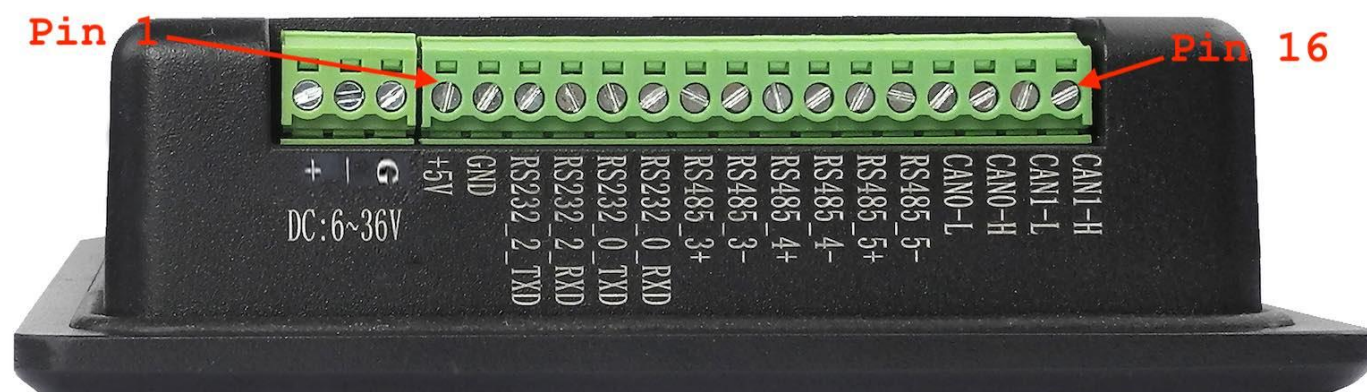

RS232, RS485 and CAN

This product has 3 x CPU UART, 2 x USB UART by default, 6 x UART channels at most. The default configuration is 2 x RS232 and 3 x RS485, including 1 RS232 debug port. There is 1 x CAN that can be configured to RS232 (USB UART).

The table below offers more detailed description of every pin and its definition:

RS232 / RS485 / CAN Pin Definition:		
Pin Number	Definition	Description
Pin 16	CAN1_H	CAN H signal
Pin 15	CAN1_L	CAN L signal
Pin 14	CAN0_H	CAN H signal, Can be configured to USB UART RS232
Pin 13	CAN0_L	CAN L signal, Can be configured to USB UART RS232
Pin 12	RS485_5-	USB UART2, RS485 -(B) signal
Pin 11	RS485_5+	USB UART2, RS485 +(A) signal
Pin 10	RS485_4-	USB UART1, RS485 -(B) signal
Pin 9	RS485_4+	USB UART1, RS485 +(A) signal
Pin 8	RS485_3-	CPU UART3, RS485 -(B) signal
Pin 7	RS485_3+	CPU UART3, RS485 +(A) signal
Pin 6	RS232_0_RXD	CPU UART4, RS232 RXD signal
Pin 5	RS232_0_TXD	CPU UART4, RS232 TXD signal
Pin 4	RS232_2_RXD	CPU UART2, RS232 RXD signal, Debug Port
Pin 3	RS232_2_TXD	CPU UART2, RS232 TXD signal Debug Port
Pin 2	GND	System Ground

RS232 / RS485 / CAN Pin Definition:		
Pin 1	+5V	System +5V Power Output, No more than 1A Current output

Table 82 Connectivity Section

Attention


1. RS485_3,RS485_4 and RS485_5 can control the input and output direction automatically. There's no need to control it from within the software.
2. The 120Ω match resistor for the **RS485** is **already mounted** by default.
3. The 120Ω match resistor for the **CAN** bus is **NOT mounted** by default.

GPIO Port

The PPC-A53-070 Industrial Panel PC has a 10 Pin 3.81mm **GPIO Connector**, as shown in the figure below. The table below gives details about the definition of every Pin.

The VDD_ISO is an isolated power *input* pin, you should attach a 5~24V DC power input to this pin.

It is also possible to use the onboard 5V power supply. The 5V on board power supply can be re-routed to the *Isolated Power Input* pin by populating R236 and R239 PCB footprints with 0Ω resistors **in the factory**. In this case you don't need to provide a DC power supply unit to use the GPIO, and the VDD_ISO input will become a *5V OUTPUT* powered by the on board 5V.

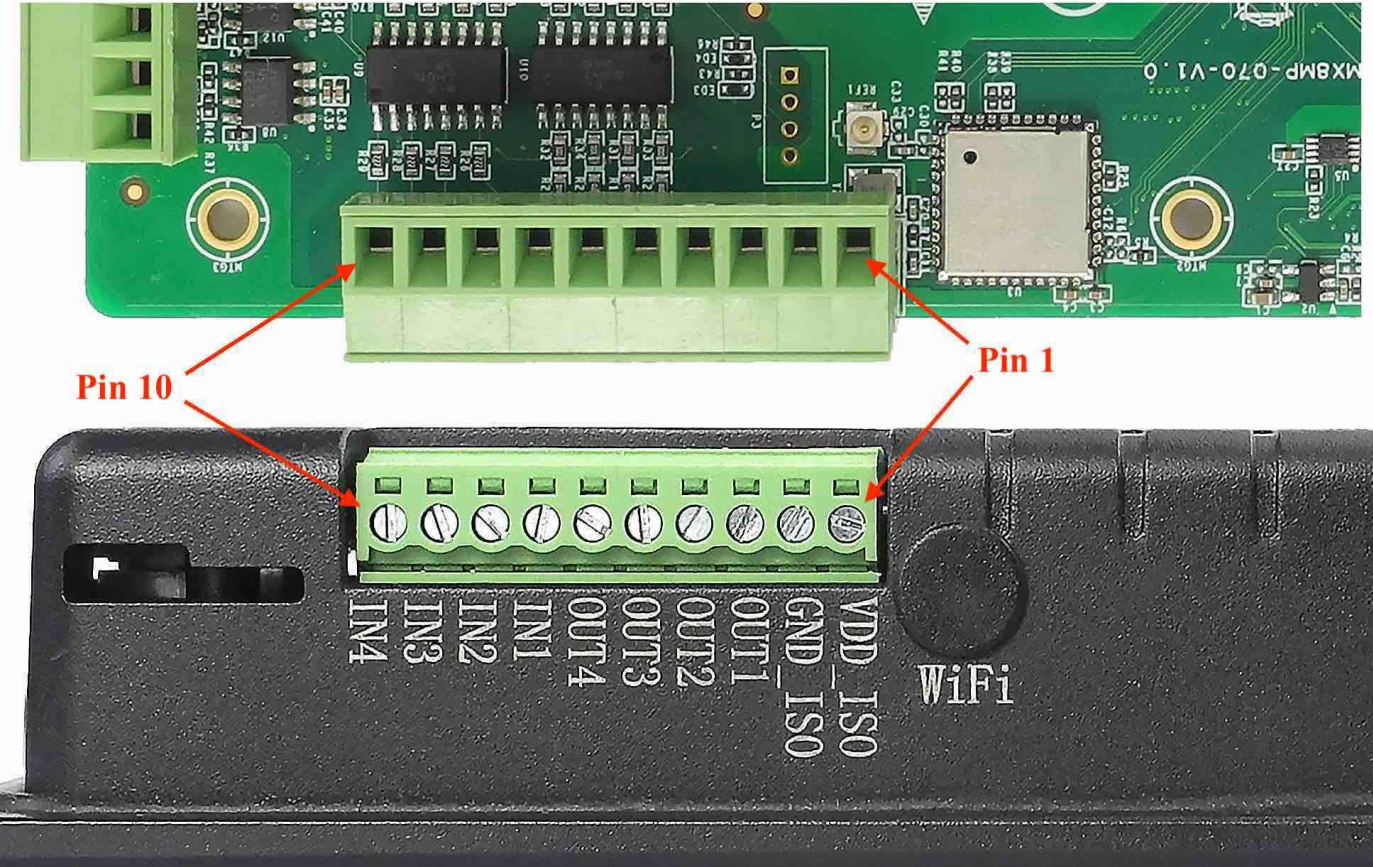


GPIO

GPIO Pin Definition:	
Pin Number	Definition
Pin 1	Isolated Power Input ³
Pin 2	Isolated Ground Input
Pin 3	OUT1
Pin 4	OUT2
Pin 5	OUT3
Pin 6	OUT4
Pin 7	IN1
Pin 8	IN2
Pin 9	IN3
Pin 10	IN4

Table 83 GPIO Connector Pin-out

³ If the isolation is not a requirement, it is possible to use a non-isolated PSU instead.

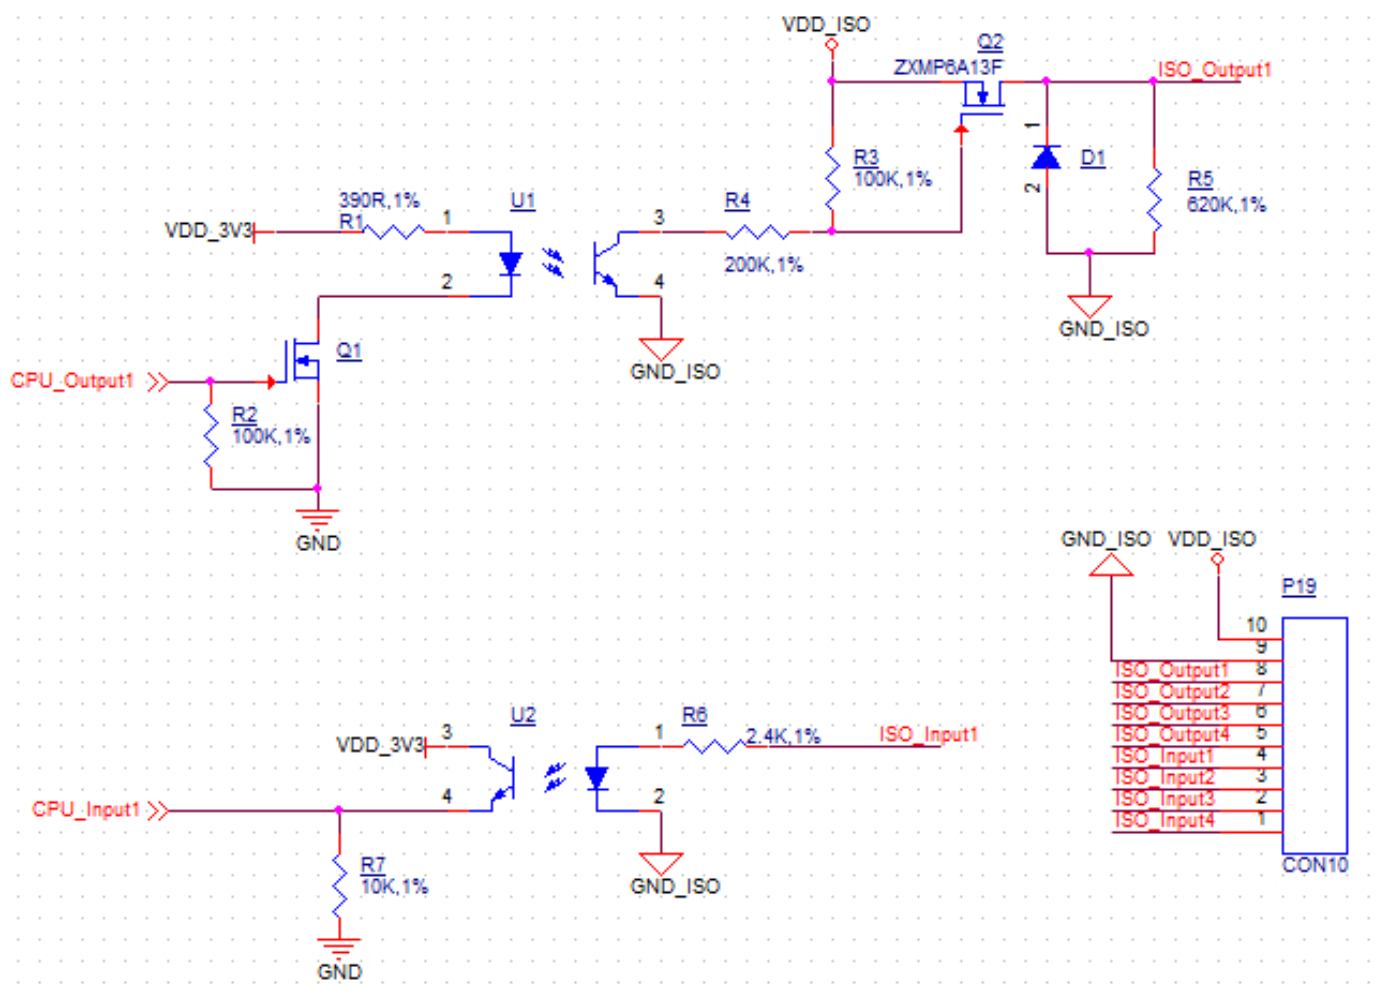

Isolated GPIO reduced schematic


⚠ Attention

- The GPIO has been Opt-Isolated and it uses the 24V Logic by default.
- The 4 output channels can drive at most 500mA current on each channel.

USB Connectors

There are 2 x **USB HOST** and 1 x **USB DEVICE** (for flashing OS) ports onboard: 1 x USB 2.0 HOST, 1 x USB 3.0 HOST, 1 x USB Type-C , as shown in the figures below.

USB3.0 port and USB-C port share one node and cannot be used together. In Linux USB3.0 HOST is enabled by default; in Android USB-C OTG is enabled by default. You can change this config by software in the operating systems, e.g.: disable USB3.0 HOST then enable USB-C OTG in Linux, or vice versa in Android.

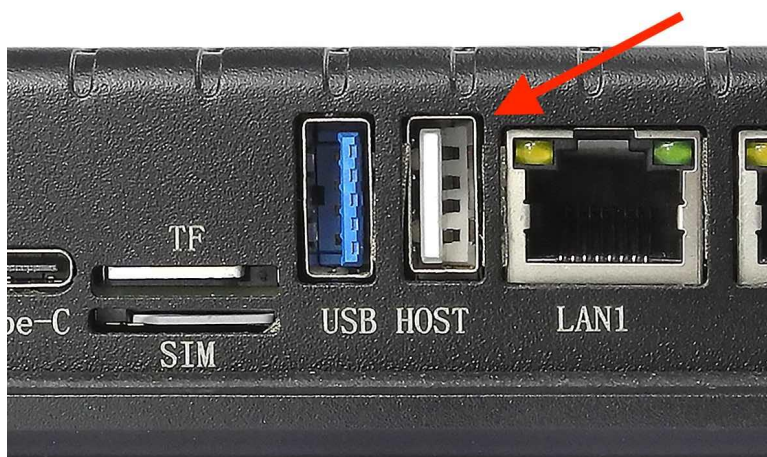

USB 2.0 HOST Port (embedded / enclosed PC version)



USB 3.0 HOST Port (embedded / enclosed PC version)



USB Type-C Port (embedded / enclosed PC version)




Warning

Be careful not to touch surrounding electronic components accidentally while plugging USB devices into the embedded IPC version.

LAN Connectors

LAN (RJ45) connector provides Ethernet connectivity over standardized Ethernet cables as shown in the figure below. The integrated 2 x RJ45, GbE, including **1 x optional** Power over Ethernet (PoE) port interface supports up to 1 Gbps data throughput.

The LAN0 port supports **optional** Power over Ethernet (PoE) feature.

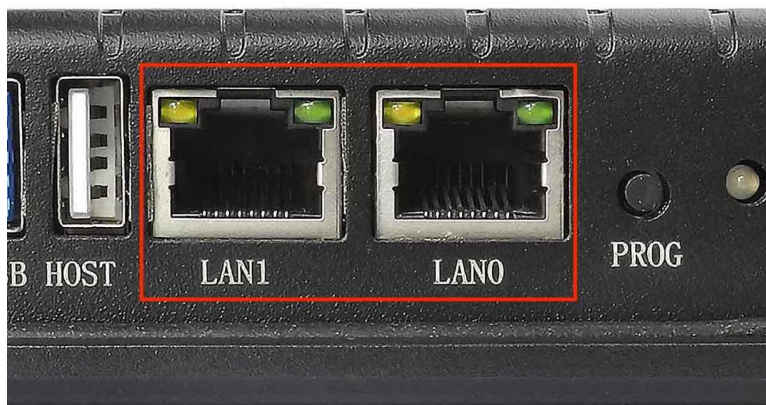

RJ45 LAN Connector

Note

Use CAT5 or better cables to achieve full data throughput over maximum distance defined by the 1000BASE-T standard (100m).

WiFi & BT Module

The PPC-A53-070 Industrial Panel PC is equipped with the popular **Realtek RTL8821CS WiFi/BT module** which supports BT/BLE 2.1/3.0/4.2, as well as 802.11ac/abgn 433Mbps 2.4/5.8 GHz Wireless LAN (WLAN).



Figure 388: *RTL8821CS WiFi/BT Module*


The PPC-A53-070 includes an SMA connector for an external WiFi/BT antenna, as illustrated in the figure below.




WiFi+BT Antenna SMA

4G/LTE Module

The PPC-A53-070 Industrial Panel PC is equipped with a **mini-PCle connector** that can connect a 4G/LTE module. The customer will also need a SIM Card Holder and a 4G/LTE Antenna Connector to ensure 4G/LTE works on the PPC-A53-070. SIM card does **NOT** support hot plug. **Power off** before inserting or removing SIM card.

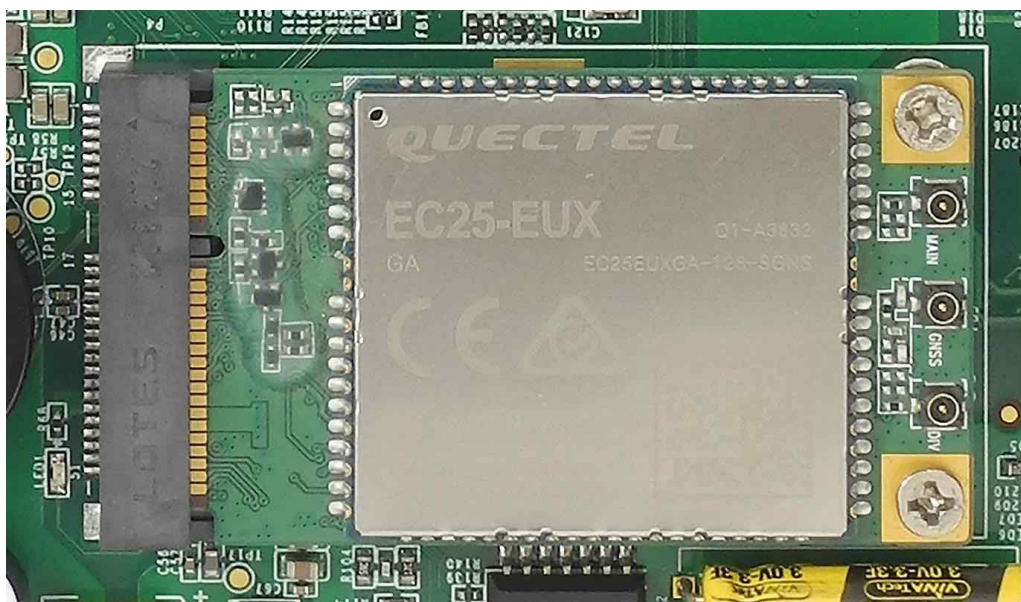

mini-PCle Connector & 4G/LTE Module

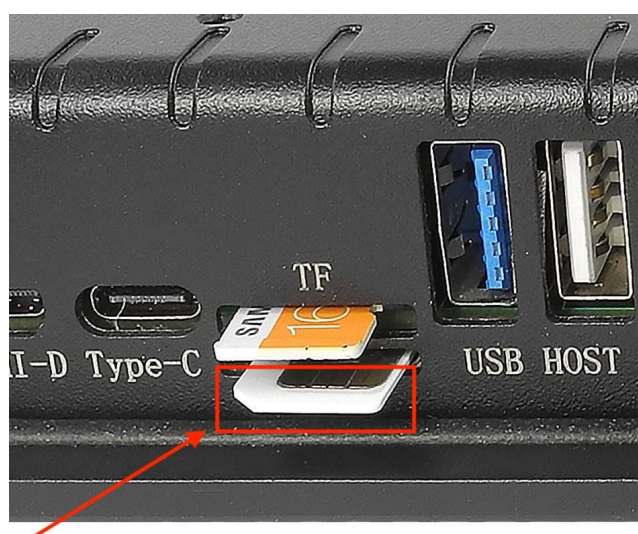

SIM Card Direction

Attention

The product does not come shipped with the 4G/LTE module by default. The customer can choose the 4G/LTE module option when placing an order, we will install all the necessary components.

TF Card Slot

The PPC-A53-070 Industrial Panel PC features 1 x **TF Card (micro SD) slot**. TF Card can address up to 128GB of storage.



TF (micro SD) Card Slot

Note

The product does not come shipped with the TF Card by default.


Audio Connectors

The PPC-A53-070 Industrial Panel PC features some audio peripherals. It has a **3.5mm audio input/output jack**, an **internal speaker**, as well as a small **buzzer**.



Audio Connector (enclosed PC version)

The miniature 2W embedded speaker is handy for audio reproduction, the small buzzer can play alarm/notification sounds.

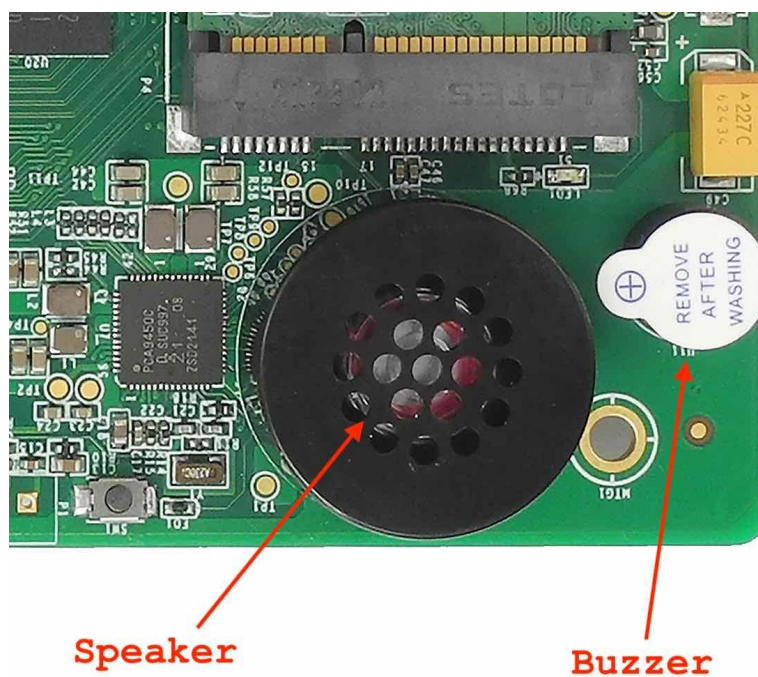

2W Micro Speaker and Buzzer

Attention

By plugging in the headphone cable, the internal speaker will be disabled automatically.

HDMI Connector

The PPC-A53-070 Industrial Panel PC is equipped with 1 x HDMI-D(Micro HDMI) OUT connector. The HDMI connector allows connecting an additional (external) monitor. HDMI output resolution can be configured by the software.



HDMI Connector

PROG Button

The PPC-A53-070 Industrial Panel PC has one button on the board marked as PROG, as shown in the figure below. It controls how the device will be booted.

To boot from SD card, press and hold the PROG button, then connect the power supply, after a few seconds, you can see the system boot from SD card, then you may release the button.

When the button is not pressed while powering up, the PPC-A53-070 will boot normally from eMMC.



PROG Button

Mounting Procedure

You can mount PPC-A53-070 with VESA mounting ([guide](#)): **75 x 75** mm, 4 x **M4** (6mm) screws.


You can also mount PPC-A53-070 with panel mounting method ([guide](#)).

Attention

Please make sure the display is not exposed to high pressure when mounting into an enclosure.

Mechanical Specifications

For PPC-A53-070, the outer mechanical dimensions are 188.05 x 123.11 x 33.20mm (W x L x H).

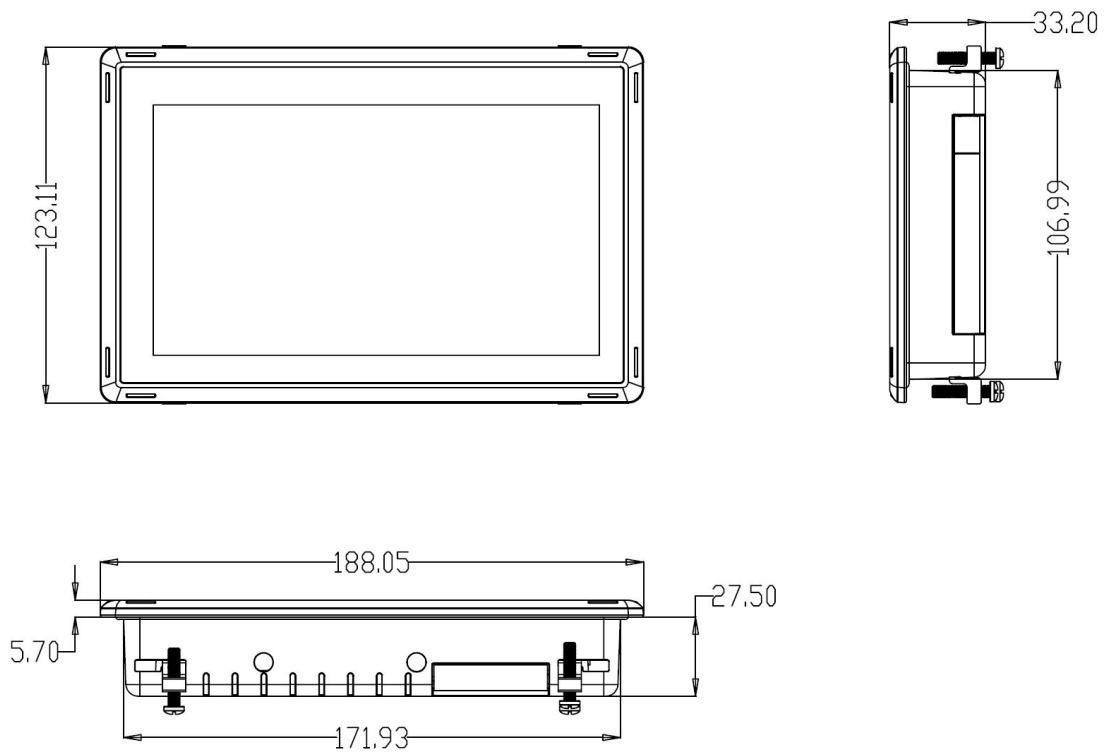

Dimensions (PPC-A53-070)

3D Model

PPC-A53-070 3D model can be viewed in the online doc in a web browser, if you are reading from the **PDF** version, please visit the [online doc](#).

Disclaimer

This document is provided strictly for informational purposes. Its contents are subject to change without notice. Chipsee assumes no responsibility for any errors that may occur in this document. Furthermore, Chipsee reserves the right to alter the hardware, software, and/or specifications set forth herein at any time without prior notice and undertakes no obligation to update the information contained in this document.

While every effort has been made to ensure the accuracy of the information contained herein, this document is not guaranteed to be error-free. Further, it does not offer any warranties or conditions, whether expressed orally or implied in law, including implied warranties and conditions of merchantability or fitness for a particular purpose. We specifically disclaim any liability with respect to this document, and no contractual obligations are formed either directly or indirectly by this document.

Despite our best efforts to maintain the accuracy of the information in this document, we assume no responsibility for errors or omissions, nor for damages resulting from the use of the information herein. Please note that Chipsee products are not authorized for use as critical components in life support devices or systems.

Technical Support

If you encounter any difficulties or have questions related to this document, we encourage you to refer to our other documentation for potential solutions. If you cannot find the solution you're looking for, feel free to contact us. Please email Chipsee Technical Support at support@chipsee.com, providing all relevant information. We value your queries and suggestions and are committed to providing you with the assistance you require.