

Figure 1. Physical Photo of AHVAC3KVR5MABT3

FEATURES

- High precision
- High efficiency
- 3-Channels Output
- High output voltage stability
- Linear modulation of output voltage
- Overcurrent protection
- Short circuit protection
- Digital display for output voltage

APPLICATIONS

The AHVAC3KVR5MABT3 is specifically designed for AC-DC conversion, transforming AC voltage into high DC voltage. It can be used for:

- X-ray Machine
- Spectral Analysis
- Nondestructive Inspection
- Semiconductor Manufacturing Equipment
- Particle Accelerator
- Capillary Electrophoresis

- Particles Injection
- Physical Vapor Phase Deposition
- Electrospinning Preparation of Nanofiber
- Glass/ Fabric Coating
- DC Reactive Magnetron Sputtering

DESCRIPTION

To operate the high voltage power supply, first connect the AC 90~230V input, and then turn on the power. Ensure the potentiometer is set to "0" before opening the high voltage switch. Next, adjust the potentiometer in a clockwise direction while observing the digital display value. The output voltage = the display value. When the required voltage is reached, rotate the potentiometer lock in a clockwise direction to lock the potentiometer. This will prevent accidental adjustments to the potentiometer, which could alter the output voltage. High voltage connection wire is used for high voltage output.

SAFETY PRECAUTIONS

To ensure safe operation, the high voltage power supply must be reliably grounded. Under no circumstances

High Voltage Power Supply



AHVAC3KVR5MABT3

should the high voltage wire be touched unless the power supply is switched off and the load and internal capacitors are fully discharged. After switching off the power supply, it is recommended to wait for at least 5 minutes to allow all capacitors to fully discharge.

The power supply should not be operated in a humid environment, and the operator should not be connected to ground. Although the power supply includes internal protection circuits, high voltage short circuits must be avoided.

It is important to ensure that the circuit is properly insulated, particularly between the high voltage output and the surrounding environment, to prevent electric shock.

SPECIFICATIONS

Table 1. Characteristics.

 $T_A = 25$ °C, unless otherwise noted

Parameter	Symbol	Test Conditions	Min.	Тур.	Max.	Unit
AC Input Power Supply Voltage	V _{VPS}		90	110	230	V _{AC}
January Daviday Commission Commis	Ivps_qc	$I_{VOUT} = 0$ mA VPS = 110V		≤70		mA
Input Power Supply Quiescent Current		$I_{VOUT} = 0$ mA VPS = 220V		≤50		mA
Input Power Supply Current at Full Load	Ivps_fl	$I_{VOUT} = 0.5 \text{mA}$ $VPS = 110V$		≤220		mA
		$I_{VOUT} = 0.5 \text{mA}$ VPS = 220V		≤110		mA
Input Voltage Regulation Ratio	ΔVουτ/ΔVPS	VPS = 90V ~ 230V		0.05		%
Output Voltage Range	Vvout	$I_{VOUT} = 0 \sim 0.5 mA$	0		3000	V
Output Current Range	I _{VOUTMAX}	V _{VPS} = 90V ~ 230V	0		0.5	mA
Output Load Resistance Range			$\frac{V_{VOUT}}{I_{VOUT}}$		∞	ΜΩ
Output Modulation Linearity				≤0.1		%
Output Voltage Temperature Coefficient	ТСуоит	$V_{VPS} = 90V \sim 230V$ $V_{VOUT} = 3kV$ $I_{VOUT} = 0.5mA$ $T_A = -20^{\circ}C \sim 55^{\circ}C$		≤0.01		%/°C
Output Voltage Range v.s. Temperature	Vvouт(Т)	$V_{VPS} = 90V \sim 230V$ $V_{VOUT} = 3kV$ $I_{VOUT} = 0.5mA$ $T_A = -20^{\circ}C \sim 55^{\circ}C$	0.99V vouт	Vvout	1.01V _V оит	V





AHVAC3KVR5MABT3

P	arameter	Symbol	Test Conditions	Min.	Тур.	Max.	Unit
Output Voltage	Short Term Drift	$\frac{\left \Delta V_{\text{VOUT}}/V_{\text{VOUT}}\right }{\Delta t \text{ (min)}}$	$V_{VPS} = 90V \sim 230V$ $V_{VOUT} = 3kV$		≤0.05		%/min
1 1000 1200 1700		$\frac{\left \Delta V_{\text{VOUT}}/V_{\text{VOUT}}\right }{\Delta t \text{ (h)}}$	$I_{VOUT} = 0.5 \text{mA}$ $T_A = -20^{\circ}\text{C} \sim 55^{\circ}\text{C}$		≤0.05		%/h
Mean Tin	ne Between Failure	MTBF			1M		h
	Short Circuit Current at the Output	Ivout_sc			≤0.1		mA
Loa	d Regulation	$\frac{\left \Delta V_{\text{VOUT}}/V_{\text{VOUT}}\right }{\Delta I_{\text{VOUT}}}$	$V_{VOUT} = 3kV$ $I_{VOUT} = 0 \sim 0.5mA$		≤0.05		%/mA
Full l	Load Efficiency	η	$V_{VPS} = 90V \sim 230V$ $V_{VOUT} = 3kV$ $I_{VOUT} = 0.5mA$		≥70		%
Operating	Temperature Range	T _{opr}		-20		55	°C
Storage 1	emperature Range	T _{stg}		-20		80	°C
External Dimensions				350×304×125 13.78×11.96×4.92		mm	
						inch	
Weight					4000		g
					8.82		lbs
					141.10		Oz



PANNEL INSTRUCTIONS

Front Panel

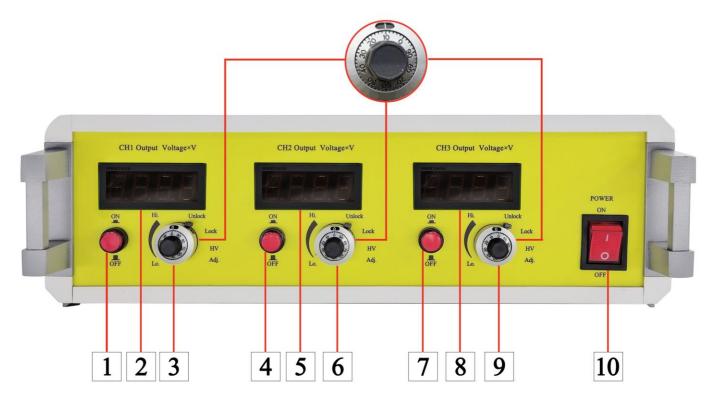


Figure 2. Front Panel

- 1. CH1 High Voltage Output ON/OFF Switch.
- 2. Display the CH1 output voltage: Digital display for the output voltage. The actual output voltage = the reading.
- 3. CH1 HV adjustment: 10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale \times 20 Ω +N \times 2k Ω . The number of turns (N) is shown in the frame above the scale. For example, as Figure 2 shows, when the scale is 10, and the frame above the scale shows 1 ($2k\Omega$), then the resistance = $10\times20\Omega+1\times2k\Omega=2.2k\Omega$, and the like.
- 4. CH2 High Voltage Output ON/OFF Switch.
- 5. Display the CH2 output voltage: Digital display for the output voltage. The actual output voltage = the display value.
- 6. CH2 HV adjustment: 10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale \times 20 Ω +N \times 2k Ω . The number of turns (N) is shown in the frame above the scale. For example, as Figure 2 shows, when the scale is 10, and the frame above the scale shows 1 ($2k\Omega$), then the resistance = $10\times20\Omega+1\times2k\Omega=2.2k\Omega$, and the like.
- 7. CH3 High Voltage Output ON/OFF Switch.
- 8. Display the CH3 output voltage: Digital display for the output voltage. The actual output voltage = the display value.

AHVAC3KVR5MABT3

- 9. CH3 HV adjustment: 10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale \times 20 Ω +N \times 2k Ω . The number of turns (N) is shown in the frame above the scale. For example, as Figure 2 shows, when the scale is 10, and the frame above the scale shows 1 (2k Ω), then the resistance =10×20 Ω +1×2k Ω =2.2k Ω , and the like.
- 10. AC Main Power ON/OFF Switch.

Back Panel

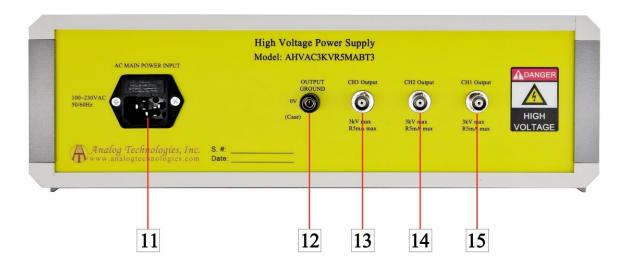


Figure 3. Front Panel

- 11. Input connector: AC input 90 ~ 230V 50/60Hz connector.
- 12. Output ground: high voltage power supply output ground terminal.
- 13. CH1 HV output: 1m long connection wire outputs 3kV and 0.5mA.
- 14. CH2 HV output: 1m long connection wire outputs 3kV and 0.5mA.
- 15. CH3 HV output: 1m long connection wire outputs 3kV and 0.5mA.



TESTING DATA

Test conditions: $V_{VPS} = 90 \sim 230 V_{AC}$, $T_A = 25 ^{\circ}C$, $R_{LOAD} = 6 M \Omega$

The measured output voltage, V_{VOUT}, corresponding to the control port input voltage, V_{CTRL}, is shown in Figure 4.

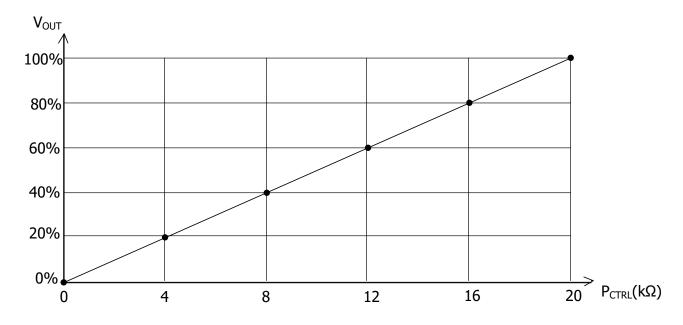


Figure 4. VCTRL vs. VOUT

NAMING PRINCIPLE

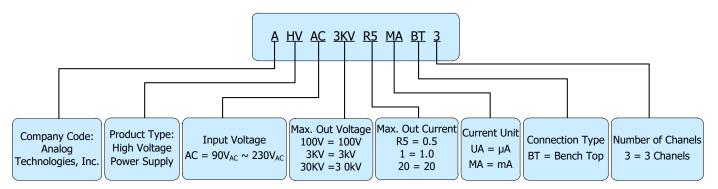


Figure 5. Naming Rules of AHVAC3KVR5MABT3



DIMENSIONS

I. Dimension of the leads.

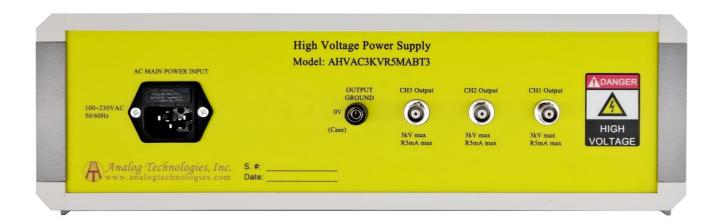


Figure 6. Leads of AHVAC3KVR5MABT3

Lond Wives	Dian	neter	Length		
Lead Wires	mm	inch	mm	inch	
Thick brown lead wire	4.5	0.177	1000	39.370	
Power cord	6.5	0.256	1800	70.866	



II. Outline Dimensions.

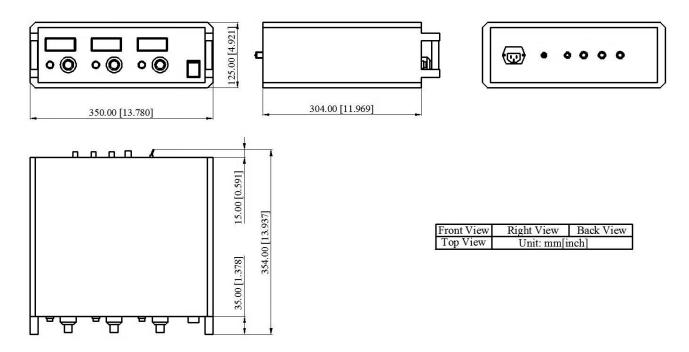


Figure 7. Outline Dimensions

ORDERING INFORMATION

Part Number	Buy Now
AHVAC3KVR5MABT3	* **

NOTICE

- 1. It is important to carefully read and follow the warnings, cautions, and product-specific notes provided with electronic components. These instructions are designed to ensure the safe and proper use of the component and to prevent damage to the component or surrounding equipment. Failure to follow these instructions could result in malfunction or failure of the component, damage to surrounding equipment, or even injury or harm to individuals. Always take the necessary precautions and seek professional assistance if unsure about proper use or handling of electronic components.
- 2. Please note that the products and specifications described in this publication are subject to change without prior notice as wecontinuously improve our products. Therefore, we recommend checking the product descriptions and specifications before placing an order to ensure that they are still applicable. We also reserve the right to discontinue the production and delivery of certain products, which means that not all products named in this publication may always be available.
- 3. This means that while ATI may provide information about the typical requirements and applications of their products, they cannot guarantee that their products will be suitable for all customer applications. It is the

High Voltage Power Supply



AHVAC3KVR5MABT

responsibility of the customer to evaluate whether an ATI product with the specified properties is appropriate for their particular application.

- 4. ATI warrants its products to perform according to specifications for one year from the date of sale, except when damaged due to excessive abuse. If a product fails to meet specifications within one year of the sale, it can be exchanged free of charge.
- 5. ATI reserves the right to make changes or discontinue products or services without notice. Customers are advised to obtain the latest information before placing orders.
- 6. All products are sold subject to terms and conditions of sale, including those pertaining to warranty, patent infringement, and limitation of liability. Customers are responsible for their applications using ATI products, and ATI assumes no liability for applications assistance or customer product design.
- 7. ATI does not grant any license, either express or implied, under any patent right, copyright, mask work right, or other intellectual property right of ATI.
- 8. ATI's publication of information regarding third-party products or services does not constitute approval, warranty, or endorsement.
- 9. ATI retains ownership of all rights for special technologies, techniques, and designs for its products and projects, as well as any modifications, improvements, and inventions made by ATI.
- 10. Despite operating the electronic modules as specified, malfunctions or failures may occur before the end of their usual service life due to the current state of technology. Therefore, it is crucial for customer applications that require a high level of operational safety, especially in accident prevention or life-saving systems where the malfunction or failure of electronic modules could pose a risk to human life or health, to ensure that suitable measures are taken. The customer should design their application or implement protective circuitry or redundancy to prevent injury or damage to third parties in the event of an electronic module malfunction or failure.

www.analogtechnologies.com Sales: sales@analogti.com Help Improve Datasheet: datasheet@analogti.com Tel.: (408) 748-9100