



KA1083-01


UxV/35™ F7652M Mission Controller

Datasheet

Links to Contents of This Datasheet

[Overview of the UxV/35™ Standard](#)
[Board Categories and Additional Boards](#)
[Suggested Pin Assignments for UAVs, UGVs, and USVs](#)
[Country of Origin](#)


Description of the Board

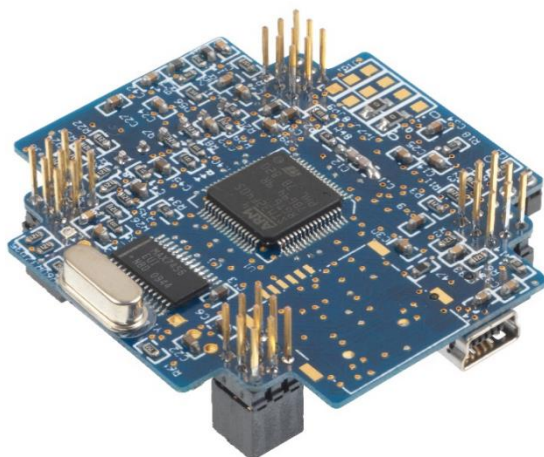

This UxV/35™ Mission Controller contains the industry standard STM32F765VIT6 that comes preloaded with ArduPilot for UxV control over MAVLink commands. It contains an on-board MPU6000 INU for situational awareness. An on-board video overlay output is present for heads up display of desired mission data on an FPV video stream.

When compared to the STM32F4 mission controller, the F7652M offers double the program memory, increased clock frequency, and more RAM. This increased performance enables it to execute more complex autonomous missions and support additional sensors and peripheral devices.

This board is designed to work with many different types of UxV software including ArduPilot, Betaflight and others. It can be used as an AutoPilot of UAVs or as an AutoDriver of UGVs and USVs.

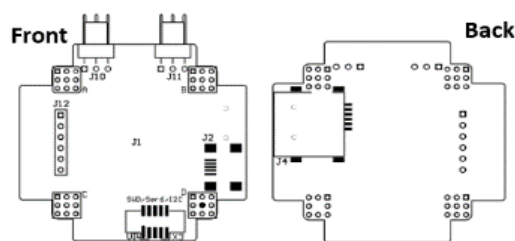

UXV/35 Assignment

Connectors

J1 – UxV/35	A1-S1	B1-SCL	C1-Vin	D1-TxA
J2 – USB Mini B	A2-S2	B2-SDA	C2-GND	D2-RxA
J4 – SD Card	A3-S3	B3-	C3-RSSI	D3-TxB
J10 – Video In	A4-S4	B4-	C4-Ain	D4-RxB
J11 – Video Out	A5-S5	B5-VidIn	C5-	
J12 – Alt GPS	A6-S6	B6-VidOut	C6-3.3v	D6-TxC
X3 – SWD/TxRx6/12C	A7-S7	B7-TxE	C7-	D7-RxC
	A8-S8	B8-RxE	C8-	D8-TxD
	A9-SBUS	B9-	C9-5v	D9-RxD

Pinouts

J1 – Assigned, J2 – Standard, J4 – Standard, J10[1-VidIn, 2-5v, 3-Gnd], J11[1-VidOut, 2-5v, 3-Gnd], J12[1-SDA, 2-5V, 3-Tx, 4-Rx, 5-Gnd, 6-SCL], X3[1-3.3v, 2-5v, 3-RST, 4-Tx6, 5-Rx6, 6-SWDIO, 7-SWCLK, 8-SDA, 9-SCL, 10-Gnd]



Overview of the UxV/35™ Standard

UAVs, UGVs, and USVs consist of multi-disciplinary components, such as electronic modules, wiring harnesses, and structural members. The UxV/35™ Standard provides a modular assembly approach for uncrewed systems that minimizes wiring and increases the success rate and speed of assembly. The goal is to bring order and interoperability to these common components.

The UxV/35™ Standard, as outlined, is compatible with open-source flight and vehicle controllers from multiple vendors such as ArduPilot and Betaflight. These UxV/35™ compatible components can include functions such as:

Flight controllers	Motive means (motors)	User interfaces
Electronic speed controls (ESC)	Communications	Enclosures & structures
Power distribution	Video systems	System testing
Global orientation	Payload systems	Local orientation

Stacking for Rapid Assembly and Interoperability

Instead of requiring soldering for connecting with other boards, UxV/35™ boards snap together into “stacks” through pin connectors. They can also be used in a planar configuration. These platforms spread out the stack into a flatter format. The precision design of the connecting pins between stacked boards ensures rapid assembly and reliable performance.

The process involves:

- unpacking a set of UxV/35™ compatible boards,
- stacking them as needed, and
- configuring their software.


After installing the batteries, the craft can operate within minutes.

Board Categories


The boards are grouped into five categories:

- [UxV/35™ Mission Boards](#) control the movement and behavior of your UAV, UGV, or USV.
- [UxV/35™ Platform and Power Boards](#) direct power to any components in the stack.
- [UxV/35™ Stack Management Boards](#) let you rotate, reverse, or rearrange your stack horizontally or vertically to best fit the shape or function of your craft.
- [UxV/35™ Interoperability Boards](#) adapt the connectors on open-source boards from multiple vendors.
- [UxV/35™ Test Boards](#) enable you to test the boards and their configurations at the bench or in the field.

For a description of currently available UxV/35™ boards in each category, please see Kairos82nd.com.

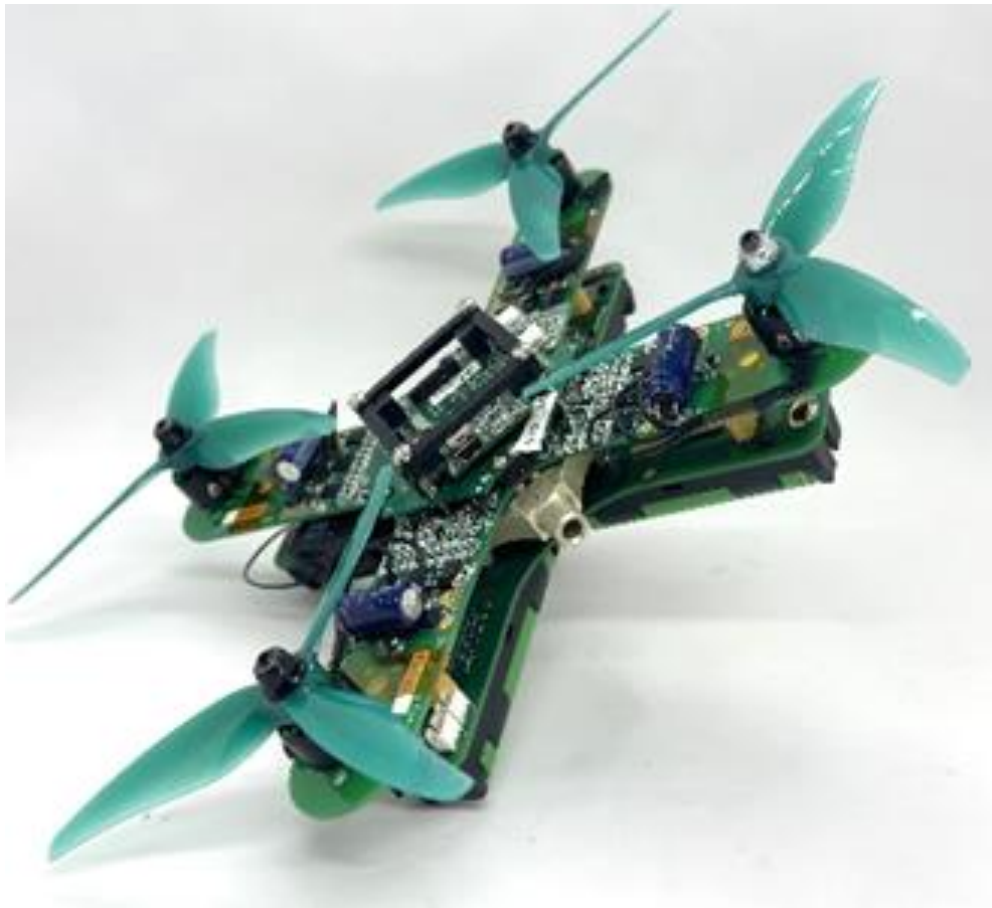

**Examples of
Stacked UxV/35™ Boards**


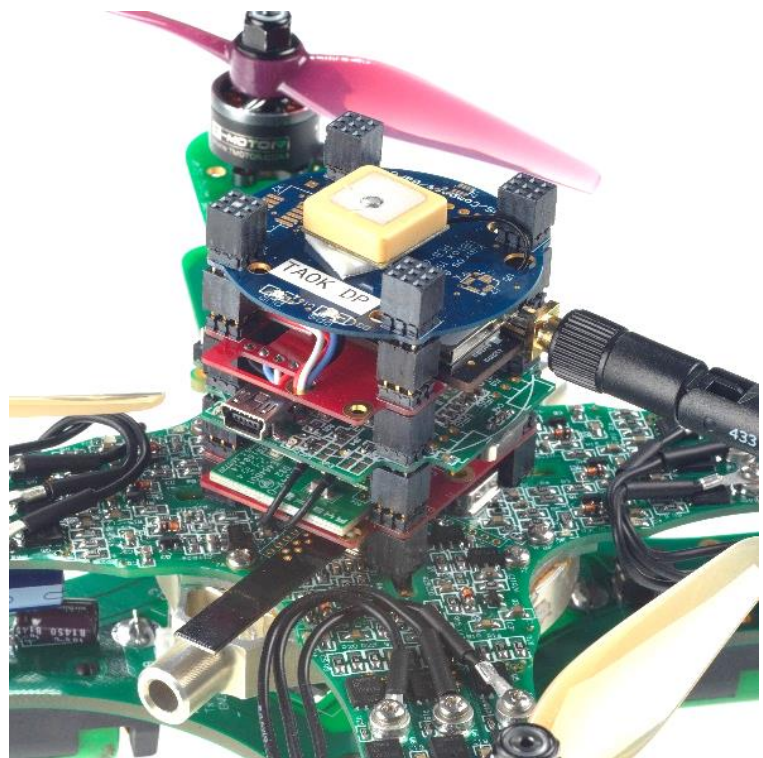




Defining the UxV/35™ standard

The UxV/35™ Bus is divided into 4 quadrants, located at the 4 corners of the 30.5mm square board (ad hoc industry standard). The four quadrants are assigned signal groups as follows:


- A Servo Signals
- B I2C and General-Purpose Signals
- C Power and Power Monitoring, Analogs, Safety
- D Serial Signals

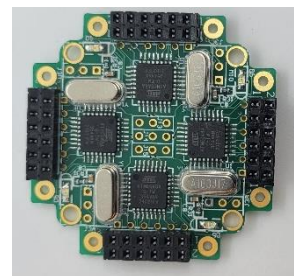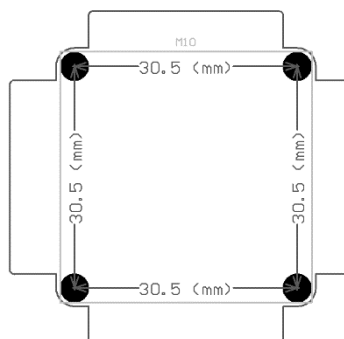

The groups are arranged on the board in the four corners. Each of the groups is assigned a letter in the range A – D. The groups are assigned as follows:

- Group A Upper Left
- Group B Upper Right
- Group C Lower Left
- Group D Lower Right


A	B
C	D

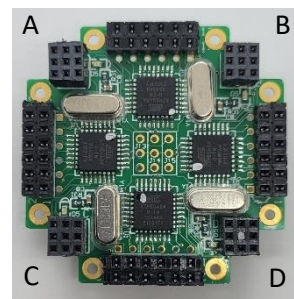

With Kairos assistance, Samtec developed a set of connectors based on a 2mm grid in a 3 x 3 pinning format. Groups A, B, and C use the full 9-pin load. Group D uses an 8-pin load. Without the middle pin, Group D becomes the key.

These connectors stack and nest forming a columnar bus of 9 pins. The concept is similar to that of PC/104. Samtec assigned these P/Ns:

Samtec P/N	Connector Type
ASP-232112-05	8-pin loaded, 2mm 3x3 format, center key
ASP-232112-06	9-pin loaded, 2mm 3x3 format

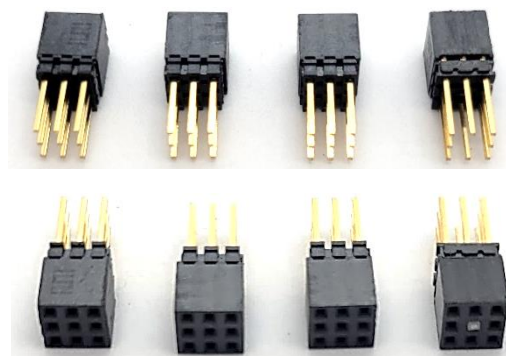

Each group is numbered 1 through 9, left to right, starting in the upper left, and proceeding across and down. The group precedes the pin number when referencing a pin. The pins of the four groups are numbered as follows:

A1	A2	A3
A4	A5	A6
A7	A8	A9

B1	B2	B3
B4	B5	B6
B7	B8	B9

C1	C2	C3
C4	C5	C6
C7	C8	C9

D1	D2	D3
D4		D6
D7	D8	D9



Each of the group's A-D are assigned signals that relate to the control and monitoring of unmanned ground, air, and surface vehicles. The group assignments are as follows:

- | | | |
|------|----------------|----------------------------------------|
| A1 – | Servo Output 1 | Assigned to S1 |
| A2 – | Servo Output 2 | Assigned to S2 |
| A3 – | Servo Output 3 | Assigned to S3 |
| A4 – | Servo Output 4 | Assigned to S4 |
| A5 – | Servo Output 5 | |
| A6 – | Servo Output 6 | |
| A7 – | Servo Output 7 | |
| A8 – | Servo Output 8 | |
| A9 – | SBUS Signal | Serial Receive Channel E (input to FC) |
-
- | | | |
|------|---------------------------|----------------------------------------------------------------------------|
| B1 – | Primary I2C Clock (SCL) | |
| B2 – | Primary I2C Data (SDA) | |
| B3 – | Secondary I2C Clock (SCL) | |
| B4 – | Secondary I2C Data (SDA) | |
| B5 – | GP1 | Video In from Camera or Secondary SPI MISO |
| B6 – | GP2 | Video Out from Text Overlay or Secondary SPI MOSI |
| B7 – | GP3 | Serial Transmit Channel F (output from FC) or Secondary SPI SCLK |
| B8 – | GP4 | Serial Receive Channel F (input to FC) or Secondary SPI Chip Select #1 |
| B9 – | GP5 | Serial Transmit Channel E (output from FC) or Secondary SPI Chip Select #2 |
-
- | | | |
|------|-----------------------------------------------|-----------|
| C1 – | Battery Voltage (3S or 4S) | Battery + |
| C2 – | Ground Battery – | |
| C3 – | Radio Signal Strength Indicator 0-3.3v (RSSI) | |
| C4 – | Analog Current Usage Indicator, 0-3.3v (Ain) | |
| C5 – | Return to Home | |
| C6 – | 3.3V Generated from Battery input (1 amp) | |
| C7 – | Reset | |
| C8 – | Pause | |
| C9 – | +5V Generated from Battery input (1 amp) | |
-
- | | | |
|------|--------------------------------------------|--|
| D1 – | Serial Transmit Channel A (output from FC) | |
| D2 – | Serial Receive Channel A (input to FC) | |
| D3 – | Serial Transmit Channel B (output from FC) | |
| D4 – | Serial Receive Channel B (input to FC) | |
| D5 – | Pin not Present, used as key | |
| D6 – | Serial Transmit Channel C (output from FC) | |
| D7 – | Serial Receive Channel C (input to FC) | |
| D8 – | Serial Transmit Channel D (output from FC) | |
| D9 – | Serial Receive Channel D (input to FC) | |






Suggested Pin Assignments for UAV, UGV, and USV

Although autopilots for uncrewed systems have significant configuration abilities (mostly I/O), these suggested assignments enable lower-skilled interoperability:

UAV – Quadcopter

S1	Forward Left Rotor, CW
S2	Rear Left Rotor, CCW
S3	Rear Right Rotor, CW
S4	Front Right Rotor, CCW
TxC/RxC	GPS
TxB/RxB	MavLink
TxA/RxA	Commander/Swarm
I2CA	Baro, Compass

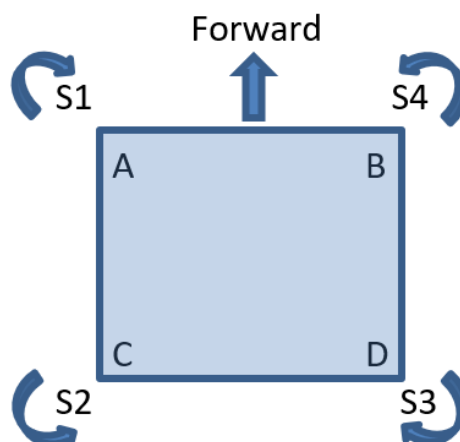

UAV – Fixed Wing


S1	Elevator
S2	Flaperon Right
S3	Flaperon Left
S4	Throttle ESC
TxC/RxC	GPS
TxB/RxB	MavLink
I2CA	Baro, Compass
TxA/RxA	Commander

UGV

S1	Steering
S2	Throttle
S3	Brake
S4	Transmission
TxC/RxC	GPS
I2CA	Compass
TxA/RxA	Commander

USV

S1	Steering
S2	Throttle
TxC/RxC	GPS

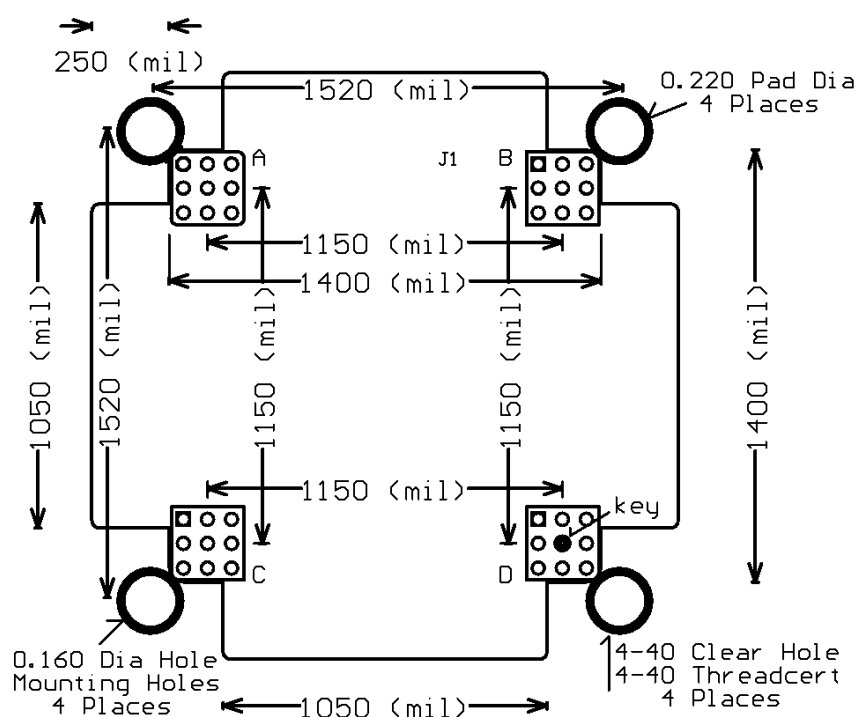

I2CA
TxA/RxA

Compass
Commander





Country of Origin

Kairos82nd uses the color of the PCB to assist in the determination of country of origin. ***One hundred percent of Kairos82nd UxV/35™ components are manufactured in Salt Lake City, Utah. The PCBs are sourced and assembled locally. The firmware on these boards is source code managed by Kairos82nd or is available as open source.***

All Kairos82nd UxV/35™ PCB boards that are **Blue** or **Green** are built with components sourced from domestic and global foundries. Any firmware is owned, managed, or controlled by Kairos82nd.

Any of our PCBs that are **Red** indicate that they may contain components from a country of origin that is not acceptable for usage by the U.S. Government without a waiver. All interoperability boards are **Red** because they can be adapted to and used with third party boards where Kairos82nd cannot manage the country of origin.

Warranty

Kairos82nd warrants its products for one (1) year from date of purchase. Kairos82nd will repair or replace, at Kairos82nd's discretion, products found to be defective. Repair or replacement will not be covered for a product that has been physically damaged or where power was misapplied.

Legal Disclaimer Notice

TO THE FULLEST EXTENT PERMITTED BY LAW, IN NO EVENT WILL KAIROS82ND BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THIS CONTRACT OR THE USE OF THE ITEMS, REGARDLESS OF WHETHER KAIROS82ND HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Kairos82nd reserves the right to make any revisions, enhancements, improvements, corrections, or any other modifications to the products (both hardware and software) at any time and without notice. Users are solely responsible for their selection and use of the hardware and software and any application of the products described in them. User agrees to indemnify and hold Kairos82nd harmless against all liabilities, costs, damages, or other losses arising out of their use.

Kairos82nd products are not designed, manufactured, or intended for use in environments requiring fail safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, weapons systems, or safety-critical applications (including life support systems and other medical devices), in which the failure of the products could lead directly to death, personal injury or severe physical or environmental damage. Kairos82nd specifically disclaims any express or implied warranty of fitness for these applications and accepts no liability for use or inclusions of Kairos82nd products in these applications.

Copyrights

© Copyright 2023, Kairos82nd. All rights reserved. All text, pictures and graphics are protected by copyrights. No copying is allowed without written approval from Kairos82nd.