




### **Companion Products (sold separately):**

- GP-015, Glove Box Dispenser Triple
- PS412-0212, Protection System Quad Glove 4" Deep

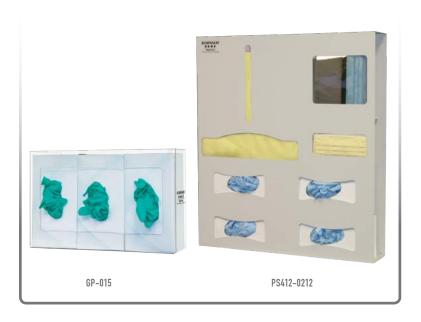

### **Product Description:**

- Face Mask Dispenser 4" Deep
- Holds contents of one box of earloop face masks in bulk
- · Hingeless lid
- 4" depth meets guidelines set by ADA and CMS
- · Keyholes for wall mounting
- Made of Clear PETG Plastic

### **Primary Area for Product Usage:**

- Any patient care areas; e.g., patient rooms, exam rooms, surgical areas, interventional radiology, areas with a scrub sink
- Emergency and admitting departments, all ports of entry, outpatient radiology/MRI, outpatient labs and pharmacies

### Dispenses:

• Most manufacturers' standard earloop face masks in bulk


### Package Specifications:

- Package Quantity: 12 per case
- 18"W x 16"H x 10"D (45.7 cm x 40.6 cm x 25.4 cm)
- 12.0 lbs (5.4 kg) approximated

### **Product Specifications** (overall external dimensions):

- 8.25"W x 5.63"H x 4.00"D (21.0 cm x 14.3 cm x 10.2 cm)
- 0.8 lbs (0.4 kg) approximated

### **Mounting Specifications:**

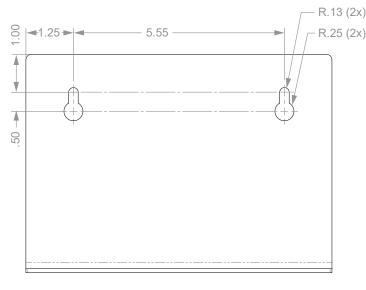


### FM401-0111


## Face Mask Dispenser - 4" Deep

Installation Instructions/Characteristics & Care

### Installation

Always mount dispensers securely prior to loading with product.

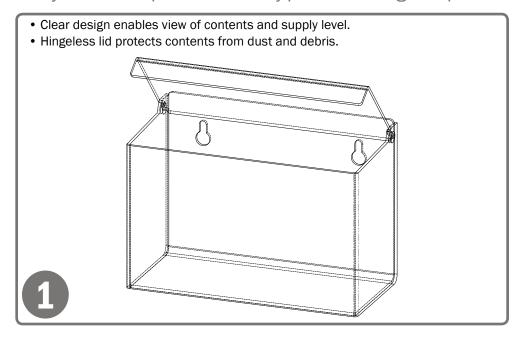

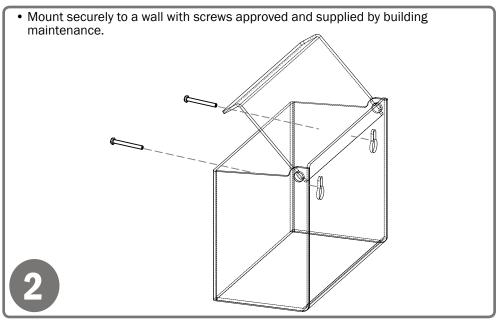

### Parts included:

Dispenser

### **Tools Required:**

· No tools required to assemble dispenser

# Care and Construction PETG Plastic

#### Material Characteristics

## Designed for Long-Term Heavy-Duty Applications

Copolyester resin is designed for heavy-duty applications, and is used by BOWMAN® Dispensers. We never use acrylic in our products.

Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to withstand handling and reduce losses due to breakage.

PETG resists a variety of chemicals and commonly used cleaning agents. It is tough and durable (not brittle), providing years of trouble-free functionality and long life.

Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact.

### **Care and Cleaning**

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.