



SPECIFICATIONS

| Model | Stroke mm | Max Energy Absorption J(kgf·m) | Max Equiv. Mass kg(kgf) | Range of Impact Rate m/s | Orifice Type |
|-------------|--------------|--------------------------------------|-------------------------------|--------------------------------|-------------------------|
| FA-1008VB-C | 8 | 1.47(0.15) | 10(10) | 0.3~1 | Single- orifice type |

COMMON SPECIFICATIONS

| Max Drag N(kgf) | Max Cycle Rate cycle/min | Max Energy Absorption per min. J/min(kgf·m/min) | Extension Force N(kgf) | Operating Temp. C° | Mass g |
|-----------------------|--------------------------------|---|---------------------------|-----------------------|-----------|
| 637(65) | 60 | 58.8(6) | 5.88(0.6) or lower | -5~70 | 27 |

PRECAUTIONS FOR USE

- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper (Stopper nut OP-020PB) is also used.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times
 the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

ADJUSTMENT METHOD

- To adjust, turn the adjustment knob.
- Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- It does not have a lock screw for locking the adjusted setting.


ABSORPTION CHARACTERISTICS


| Orifice type | Single-orifice type | Absorption characteristics |
|--------------|---------------------|----------------------------|
| Model number | FA-1008VB Series | Resistance |
| Application | For low speed | Stroke |

OPTIONAL PARTS

Eccentric angle adaptor OP-010PB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The maximum inclination angle using an inclination angle adaptor is ± 10°
- The caps and the guides for inclined use are not unbundled.

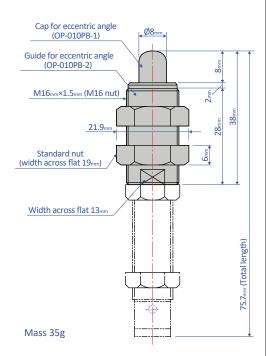





Note: Material of cap for eccentric angle: POM

Stopper nut OP-020PB

 Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

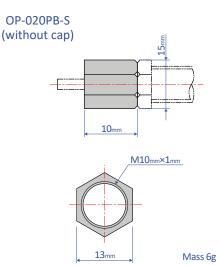

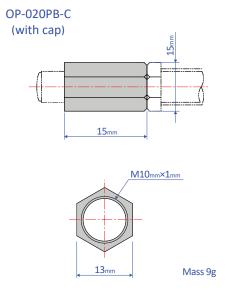

Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

Standard nuts are sold separately as well - M10 Nut

Square flange OP-040PB

Once the attachment site is determined, use the main unit's nut to securely fasten in place.

